

REMOVAL COPPER RING CUTTER

- FITS FOR COPPER & POLY FITTINGS
- WORKS FOR 1/2", 3/4", 1" PEX FITTINGS
- MUST HAVE TOOL FOR PEX PLUMBING



IWISS

ASTM F1807

PEX CRIMP RING REMOVAL TOOL


General Information

1. This tool will remove copper crimp rings and allow reuse of the fitting. It is effective on brass and plastic fittings.
2. Works with 1/2 In., 3/4 In., and 1 In. PEX copper crimp rings.
3. The copper crimp ring removal tool design allows for removal of copper rings from PEX barb fitting connections and allows fittings to be re-used.
4. Please carefully read the instructions that come with the tool to ensure proper technique is used.



- DO NOT USE ON STAINLESS PINCH CLAMPS OR STAINLESS STEEL SLEEVES.
- CAUTION: WEAR SAFETY GLASSES DURING TOOL USE TO PREVENT EYE INJURY.

Quick Guide

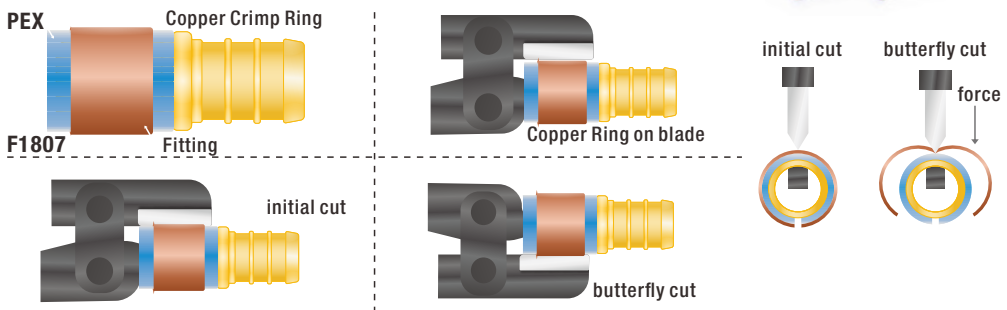

Calibration

• 1/2" BRASS	-
• 3/4" PPSU + 1" PPSU	0
• 3/4" + 1" BRASS + 1/2" PPSU	+



Operation



Insert Removal Tool into fitting and cut through the crimp ring.



Rotate the fitting 180° and completely close the tool. Remove ring.



Pinch the tubing with the tool every 20-30°.



Remove the tubing.



WARNING! This product contains chemicals including DEHP, which is known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling. For more information, go to www.P65Warnings.ca.gov.